


HEATING SEASON QUICK GUIDE

Always use both CERV and Heat Pump during heating season.



Optimal settings for Heat Pump:

- MODE: Heat
- FAN: Auto- under normal conditions. Can be adjusted to High under very cold conditions (5° and below).
- Set to comfort temperature. If after an hour, you would like to adjust comfort level change both Heat Pump and CERV settings up or down.

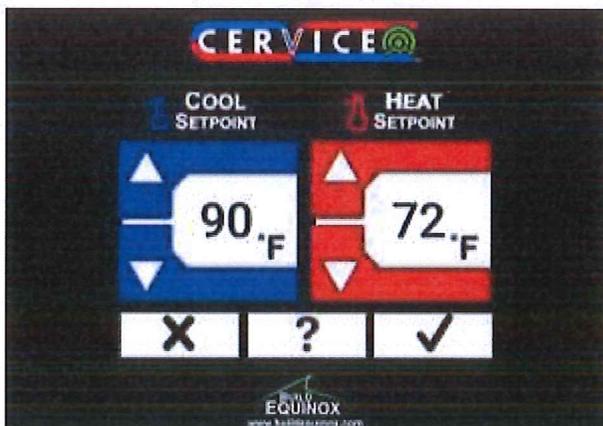


Optimal settings for CERV:

- Press thermometer icon 
- Set Cool Setpoint to 90°
- Set Heat Setpoint same as heat pump
- Press check mark button 

Please call with any questions
Vermod Homes-802.295.0042

COOLING SEASON QUICK GUIDE

- **If no AC is desired leave the heat pump off.**
- Set the CERV Cool Setpoint at desired comfort temperature.
 - **Make sure Heat Setpoint is set to 55°**

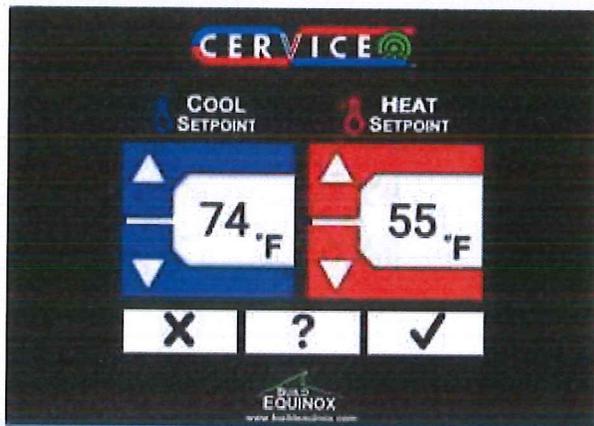

Optimal settings for CERV:

- Press thermometer button 
- Set Cool Setpoint to comfort temp
- Set Heat Setpoint to 55°
- Press check mark button 

If CERV can't keep your home cool enough, turn on Heat Pump:



Optimal settings for Heat Pump:

- MODE: Cool
- FAN: Auto -under normal conditions
Can be adjusted to High under very hot conditions (95° and above).
- Set to comfort temperature. If after an hour, you would like to adjust comfort level change both Heat Pump and CERV settings up or down.

Please call with any questions
Vermod Homes-802.295.0042